


**RYOBI**

**OPERATOR'S MANUAL  
WET/DRY VAC  
EWD5570**

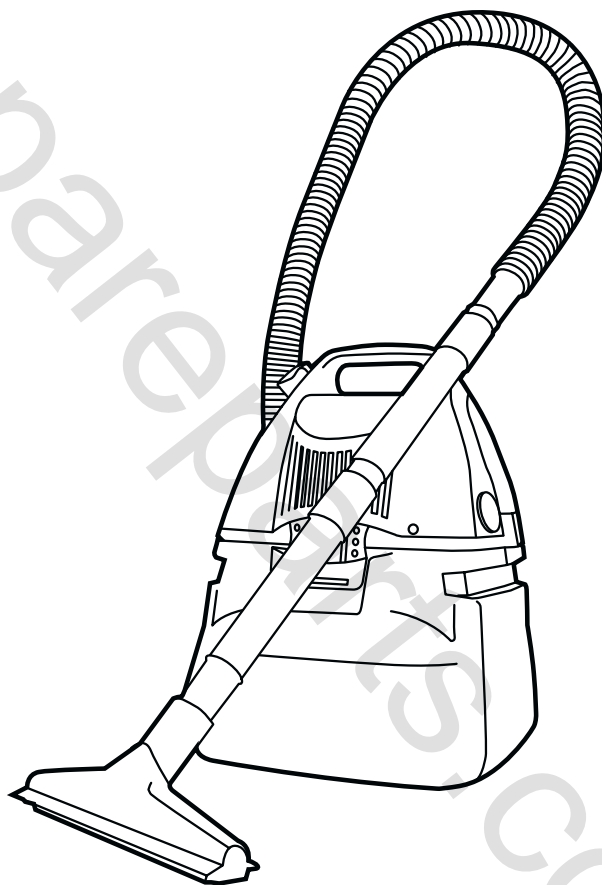

**⚠ WARNING:** To reduce the risk of injury, the user must read and understand the operator's manual before using this product.

Thank you for buying a Ryobi product.

**SAVE THIS MANUAL FOR FUTURE REFERENCE**






## ENGLISH









### TABLE OF CONTENTS

Table of contents .....	2
Line drawing .....	3-5
Parts check list .....	6
Preparing to use .....	6
How to assemble .....	6
How to use .....	6
Operating your cleaner .....	6
Emptying the dust container/dirty water container .....	6
Cleaning the filter .....	6
Storage .....	6
Important notes/troubleshooting .....	7
Important safety information .....	7
General safety information .....	7

### INTRODUCTION

This tool has many features for making its use more pleasant and enjoyable. Safety, performance and dependability have been given top priority in the design of this product making it easy to maintain and operate.

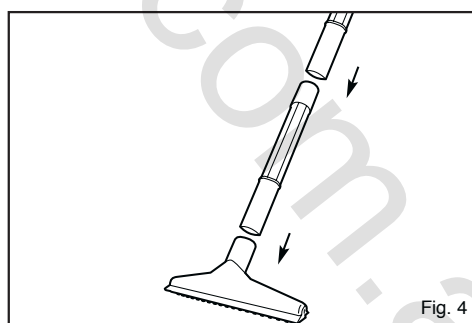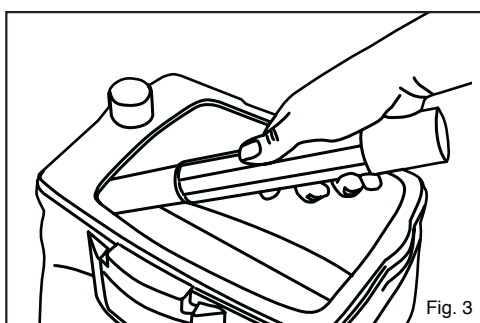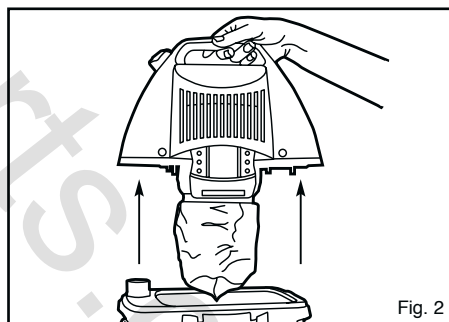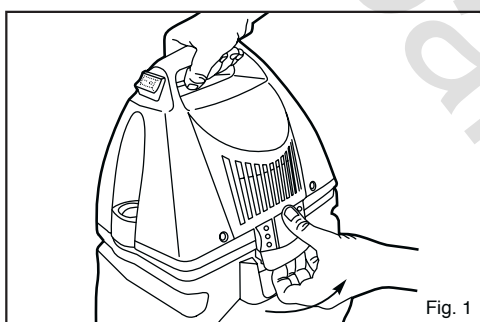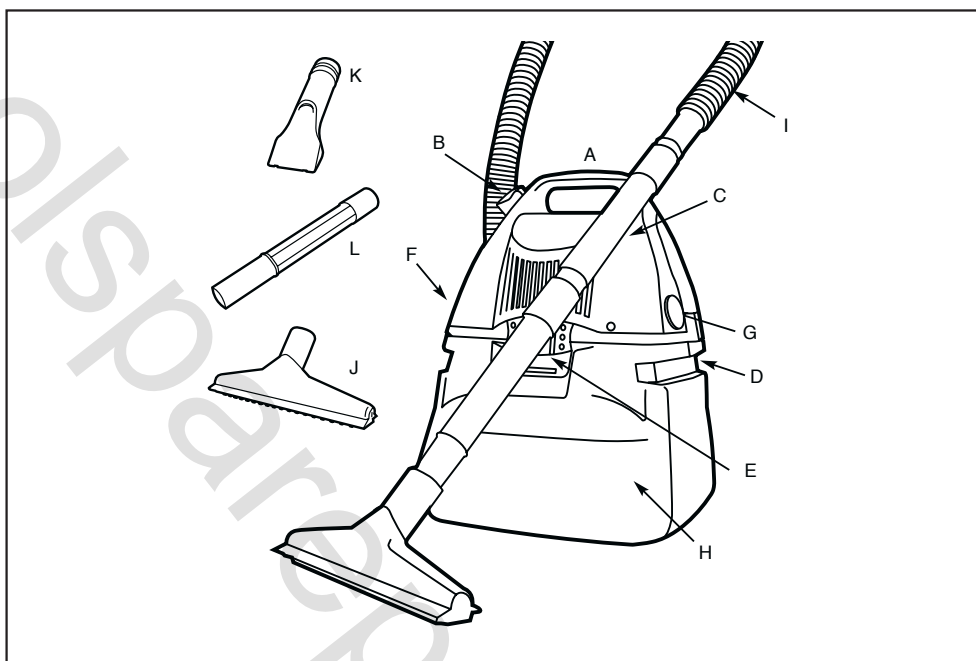

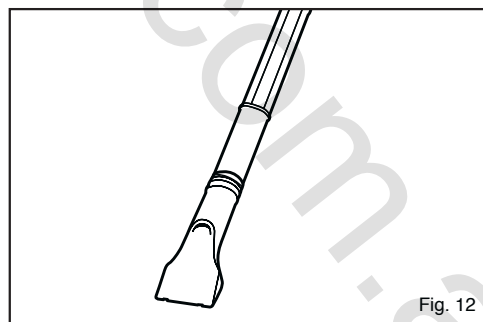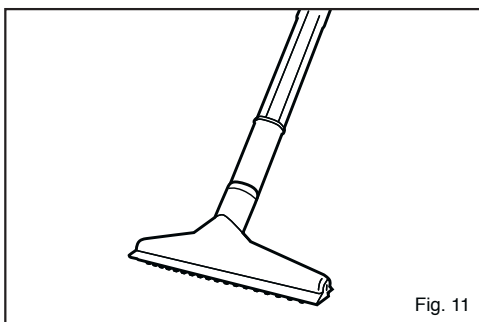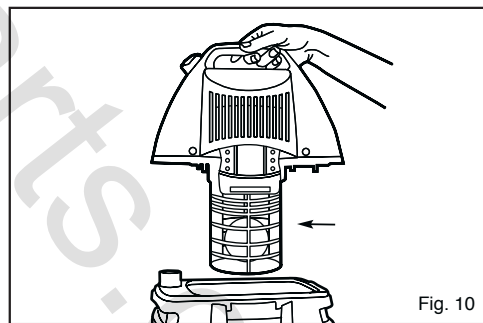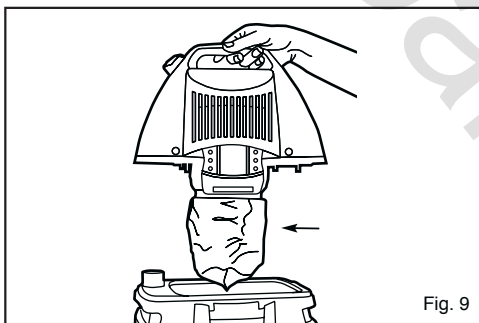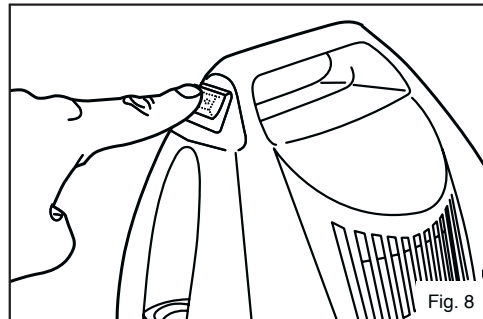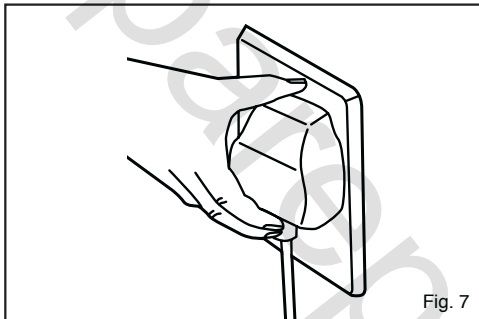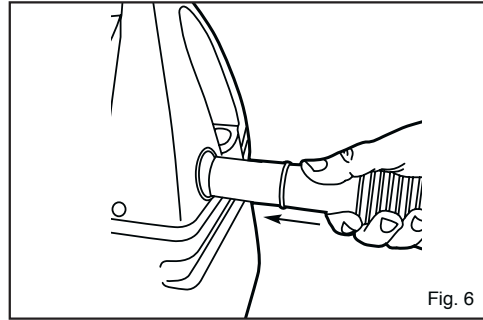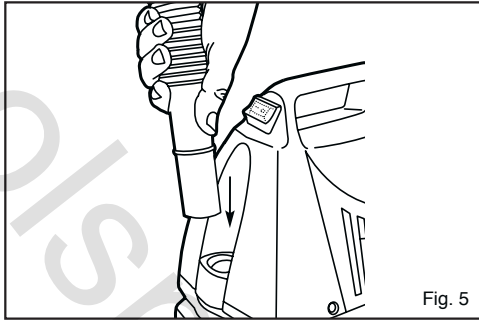

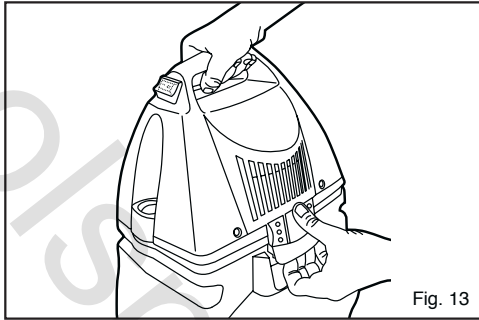


Fig. 13

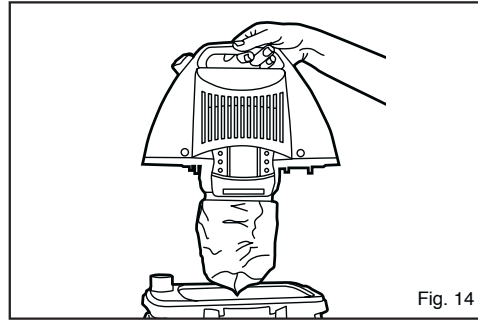


Fig. 14

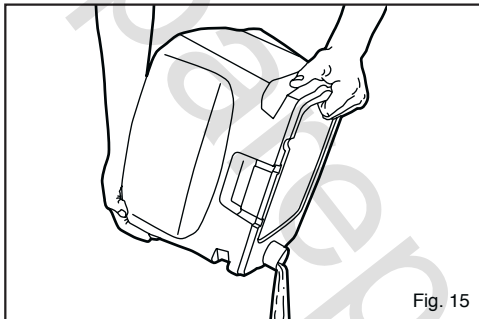


Fig. 15

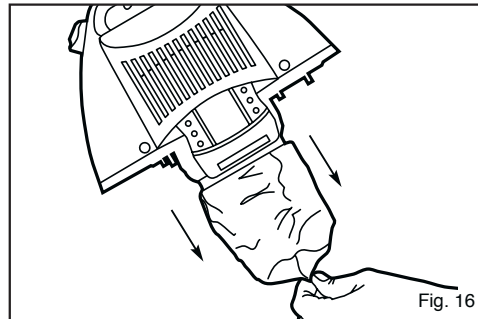


Fig. 16

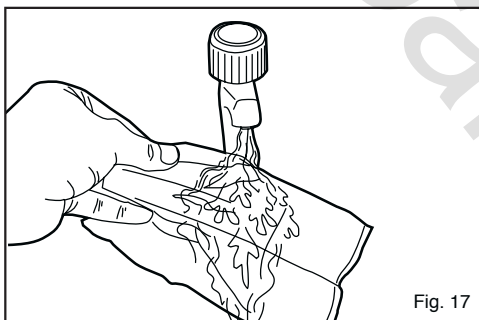


Fig. 17

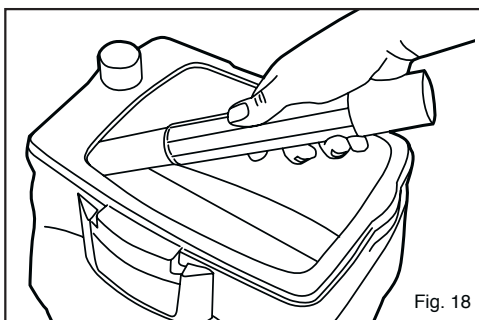


Fig. 18

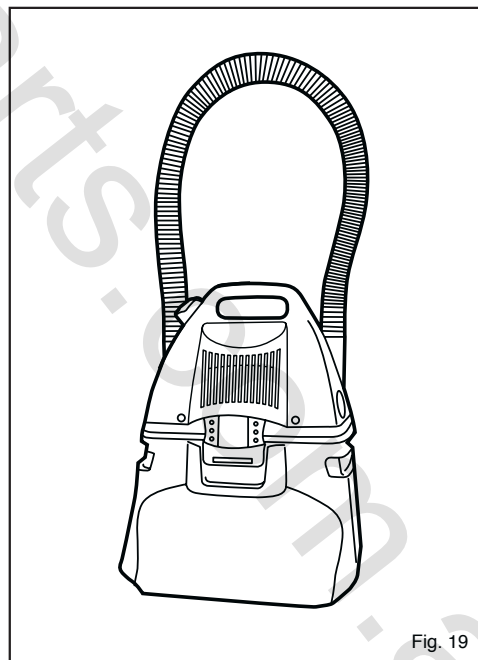


Fig. 19

## ENGLISH



**WARNING:** The appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure that they can use the appliance safely.

### PARTS CHECK LIST

- A- Carry handle
- B- On/Off button
- C- Motor housing unit
- D- Cord winding recess
- E- Release latches
- F- Vacuum hose connector
- G- Blower hose connector
- H- Dust/dirty water container
- I- Flexible hose
- J- Floor tool
- K- Hand tool
- L- Extension tubes (3)

### PREPARING TO USE

Fig. 1  
Remove the top of the vacuum by releasing the side latches.

Fig. 2  
With both latches released, lift the top section away as shown.

### HOW TO ASSEMBLE

Fig. 3  
Remove tube sections and tools from inside the vacuum cleaner

Fig. 4  
Assemble the three piece extension tubes and the floor tool by pushing them together as shown.

Fig. 5  
VACUUM - Insert flexible hose into hole labelled 'vacuum'

Fig. 6  
BLOWER - Insert the flexible hose into the hole labelled 'blow'

### HOW TO USE

Fig. 7  
Fully unwind the electrical cable and plug it into a standard domestic power outlet.

Fig. 8  
To start the vacuum cleaner, turn the power switch on.  
To stop, turn the switch off.

### OPERATING YOUR CLEANER

#### Dry

Fig. 9  
Ensure black fibre filter bag is fitted and secured using the elastic band supplied.

#### Wet

Fig. 10  
Remove black fibre filter bag, exposing safety float chamber.

Fig. 11  
Floor tool is suitable for wet or dry use.

Fig. 12  
Hand tool is suitable for wet or dry use.

#### Important

Ensure there is no remaining water in the hose and tubes before switching off the appliance.

### EMPTYING THE DUST CONTAINER/DIRTY WATER CONTAINER

Fig. 13  
Unclip release latches.

Fig. 14  
Lift out motor housing unit.

Fig. 15  
**For dry-** empty dust and debris directly into the bin.

**For wet-** tip the dirty water down sink or drain, rinse out the container.

### CLEANING THE FILTER

#### Motor protection filter

Fig. 16  
The black fibre filter bag is located on the underside of the top section and protects the motor from dust and debris during dry vacuuming.

Fig. 17  
This filter can be removed and lightly rinsed under cold water to remove any debris. Ensure it is completely dry before replacing.

**Attention:** The black fibre filter bag must always be used when dry vacuuming.

## ENGLISH

### STORAGE

Fig. 18

Tube sections and tools can be stored inside the vacuum cleaner.

Fig. 19

When not in use, the flexible tube can be stored as shown.

### IMPORTANT NOTES/TROUBLESHOOTING

- If the suction is significantly reduced, the filter may require cleaning.
- During wet vacuuming, if the float rises and blocks suction, you will notice the change in the sound that the machine makes. This is a safety feature and is intended to prevent continued use when the recovery tank is full of liquid. Switch off the appliance, empty the liquid, re-assemble and then restart.

### IMPORTANT SAFETY INFORMATION

- Always remove the re-useable black fibre filter bag before wet vacuuming.
- Do not dry vacuum without the re-useable black fibre filter bag in place.
- Ensure that all accessories, filter and extension tubes are thoroughly dry before dry vacuuming.
- The plug must be removed from the mains socket outlet before cleaning or maintaining the appliance.
- If the mains cable and /or plug is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons, in order to avoid hazard.

### GENERAL SAFETY INFORMATION

- Note: this product must be stored indoors.
- Not to be used as a toy.
- Use the appliance only as described in this manual.
- Use only the accessories recommended by the manufacturer.
- Do not use the appliance with a damaged mains cable or plug.
- Do not use the appliance if it has been dropped, damaged, left outdoors or dropped in water.  
Never pull the appliance by the mains cable.
- Do not pull on the cable to disconnect the appliance from the mains supply. Always use the plug.

- Keep the mains cable and appliance away from sources of heat.
- Do not handle the mains cable, plug or appliance with wet hands.
- Ensure that no foreign bodies can get into the openings of the appliance.
- Do not use the appliance if the openings are blocked. Keep them free from dust, fluff, hair and any other material that might cause a restriction of the air flow.
- Keep hair, loose clothing, fingers and any other parts of the body away from any moving parts.
- Do not pick up burning or smoking objects such as cigarettes, matches or hot ashes.
- Do not use to pick up flammable or combustible liquids such as petrol, or use in areas where they may be present.
- Do not change accessories while the appliance is operating.
- Always store the appliance indoors. To avoid accidents, put the appliance away safely after use.

**RYOBI TECHNOLOGIES AUSTRALIA PTY. LTD.**

**GUARANTEE**



Subject to the guarantee condition below, this Ryobi tool (hereinafter called "the product") is guaranteed by Ryobi (hereinafter called "the Company") to be free from defects in material or workmanship for a period of 24 months from the date of original purchase covering both parts and labour. Under the terms of this guarantee, the repair or replacement of any part shall be the opinion of the Company or its authorised agent. Should service become necessary during the warranty period, the owner should contact the RYOBIHELPLINE 1300 361 505 or contact the retailer from whom the product was purchased.

In order to obtain guarantee service, the owner must present the sales docket and Guarantee Certificate to confirm date of purchase. This product is sold by the dealer or agent as principal and the dealer has no authority from the Company to give any additional guarantee on the Company's behalf except as herein contained or herein referred to.

**Guarantee Conditions**

This guarantee only applies provided that the Product has been used in accordance with the manufacturer's recommendations under normal use and reasonable care (in the opinion of the Company) and such

guarantee does not cover damage, malfunction or failure resulting from misuse, neglect, abuse, or used for a purpose for which it was not designed or is not suited and no repairs, alterations or modifications have been attempted by other than an Authorised Service Agent. This guarantee will not apply if the tool is damaged by accident or if repairs arise from normal wear and tear.

The Company accepts no additional liability pursuant to this guarantee for the costs of travelling or transportation of the Product or parts to and from the service dealer or agent - such costs are not included in this guarantee.

Certain legislation, including the Trade Practices Act, 1974 (as amended) and other state and territorial laws give rights to the buyer and impose liability on the seller in certain circumstances. Nothing herein shall have the effect of excluding, restricting or modifying any condition, guarantee, right or liability imposed, to the extent only that such exclusion, restriction or modification would render any term herein void.

**RYOBI®**

**RYOBI TECHNOLOGIES AUSTRALIA PTY. LTD.**

A.B.N. 98 002 277 509

SYDNEY: 359-361 Horsley Road, Milperra, N.S.W. 2214.

Contact during normal business hours.

Tel: (02) 9792 9800 - Fax: 1800 807 993 - [www.ryobi.com.au](http://www.ryobi.com.au)

**BRISBANE:**

All enquiries Tel : 1300 361 505

**HOBART:**

All enquiries Tel : 1300 361 505

**TOWNSVILLE:**

All enquiries Tel : 1300 361 505

**ADELAIDE:**

All enquiries Tel : 1300 361 505

**MELBOURNE:**

960 Stud Road, Rowville, Vic. 3178

**PERTH:**

33-35 Sorbonne Cres. Canning Vale, W.A. 6155

Tel : (03) 9764 8656

Tel : (08) 9455 7775

**RYOBI NEW ZEALAND PTY. LTD.**

AUCKLAND: 27 Clemow Drive, Mt Wellington, N.Z.

Tel: (09) 573 0230 - Free Call: 0800 279 624 - Fax: (09) 573 0231 - [www.ryobi.co.nz](http://www.ryobi.co.nz)

Contact during normal business hours.

**This Guarantee Form Should Be Retained By The Customer At All Times**

For your record and to assist in establishing date of purchase (necessary for in-guarantee service) please keep your purchase docket and this form completed with the following particulars.

Purchased From \_\_\_\_\_

Address Of Dealer \_\_\_\_\_

Date \_\_\_\_\_ Model No \_\_\_\_\_ Serial No \_\_\_\_\_

Present This Form With Your Purchase Docket When Guarantee Service Is Required.