



Typ .. 087

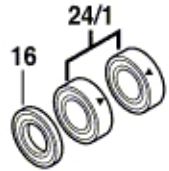

Einbaulage beachten  
Check installation position  
Attention au positionnement  
Téngase en cuenta  
la posición de montaje

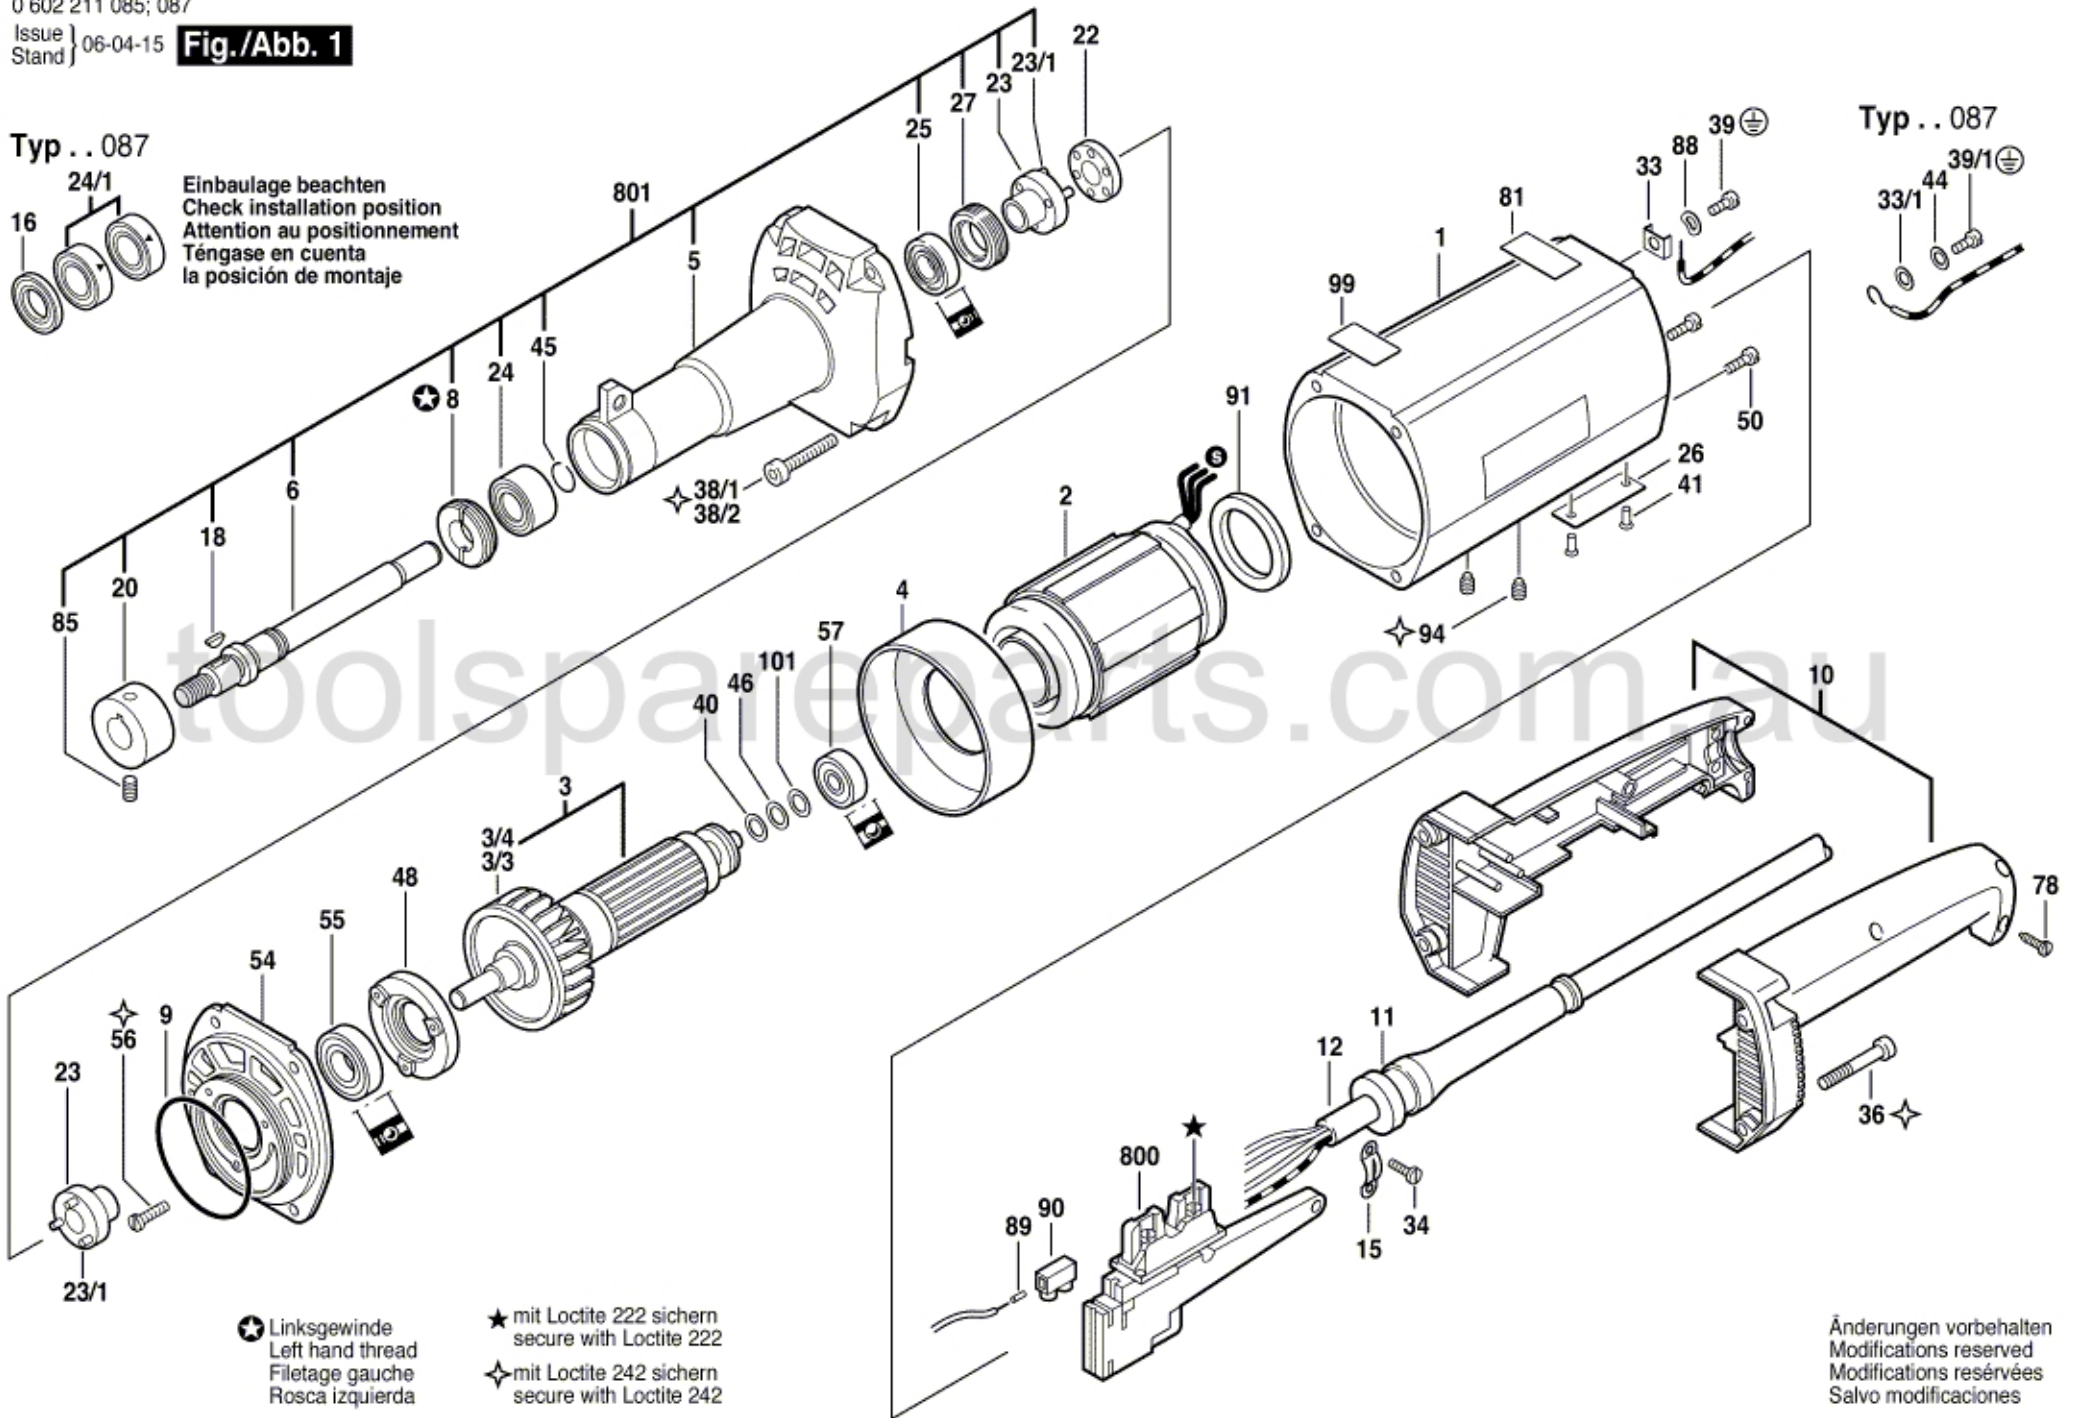


★ Linksgewinde  
Left hand thread  
Filetage gauche  
Rosca izquierda

★ mit Loctite 222 sichern  
secure with Loctite 222

◆ mit Loctite 242 sichern  
secure with Loctite 242

Typ .. 087

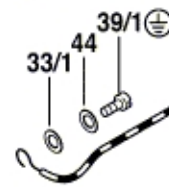

Änderungen vorbehalten  
Modifications reserved  
Modifications réservées  
Salvo modificaciones